

Pioneer

GPS NAVIGATION AUDIO SYSTEM

AVIC-F3210BT

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

Basic Hardware buttons



① **MODE** button

Press to switch between the map screen and the audio operation screen.

② **MULTI-CONTROL**

Rotate to adjust the audio volume.

Press left or right to select the previous or next song, files, etc. when the audio source is selected.

③ **LIST** button

Press to display a list of songs or folders, when an iPod or other audio source is selected.

④ **SRC/OFF** button

Press to select the audio source.

⑤ **BAND/ESC** button

Press to change the band for the radio.


⑥ **Home** button

Press to remove the detachable device from the head unit.

⑦ **Drawer**

Press to open the drawer.


Switching the screen

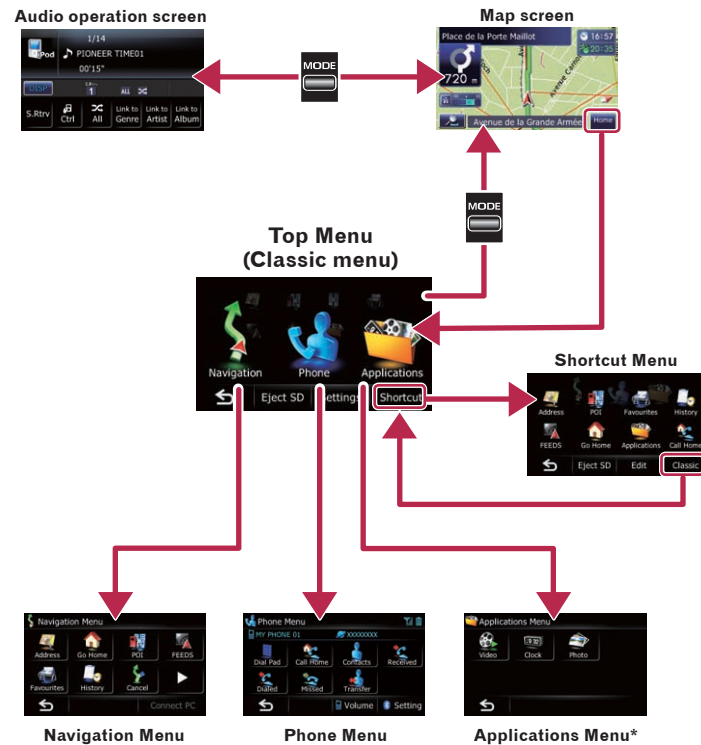

* You can launch applications downloaded to an SD memory card via the utility programme navigate FEEDS. For details, please refer to Operation Manual.

Navigation Menu

Touch **Home** on the map screen and touch **Navigation** on the “Top Menu” screen.

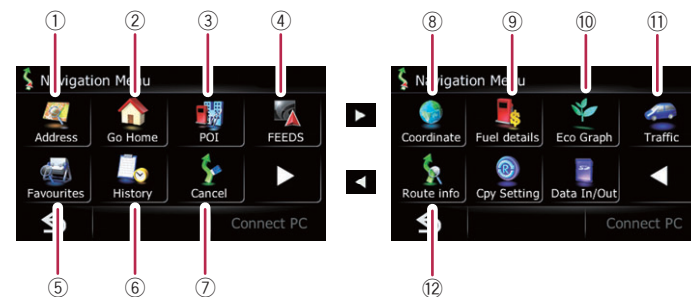

① Searches for a location by address

② Calculates the route home

③ Searches for a place from stores, restaurants, and other businesses in the points of interest database

④ Searches for POIs by using the data on external storage devices (SD)

⑤ Selects a location from stored locations

⑥ Selects a location from previously routed destinations

⑦ Cancels your current route

⑧ Sets the accurate location from a latitude and longitude

⑨ Estimates the fuel cost


⑩ Displays a graph for eco-driving

⑪ Displays the traffic information


⑫ Displays the current route information

Searching for your destination by address

1 Display “Navigation Menu” screen and touch **Address**.

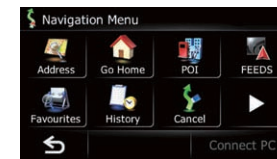


2 Input the information that you want to set as the destination.

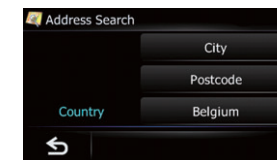

Touch one of the options. After narrowing down your destination, the Location confirmation screen will appear.

3 Touch **OK**.

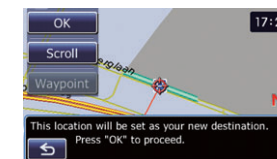

After searching for the destination, the Route confirmation screen appears.

4 Touch **OK**.



The navigation system gives you route guidance both visually and by voice.

Basic items on the map




Scrolling the map

Drag your finger along the screen to scroll the map.



Setting the volume of the route guidance

- 1 Touch **Settings** on the “Top Menu” screen.
- 2 Touch **Sound**.
- 3 Touch **+** or **-** to change the volume of the route guidance.

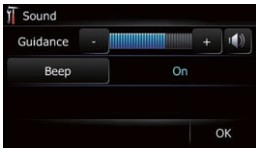


Selecting the audio source

- 1 Press the **MODE** button when the map of the current location is displayed.
- 2 Press the **SRC/OFF** button repeatedly to switch between the following sources.

TUNER (tuner)→**CD** (built-in CD player)→**USB** (USB storage device)/iPod (iPod connected using USB input)→**AUX** (auxiliary device)

Note:
The audio source is disabled if the equipment is not connected or inserted.

Using the radio (FM)

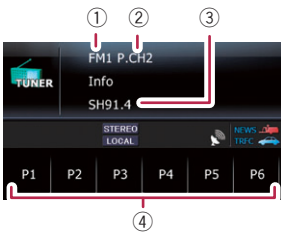


- 1 Shows which band the radio is tuned to
- 2 Shows the selected preset channel
- 3 Shows the programme service name (when available)
- 4 Stores and recalls broadcast frequencies

Playing your Apple iPod


You can control an iPod by connecting the USB interface cable for iPod (supplied) to the navigation system.

- 1 Connect your iPod.

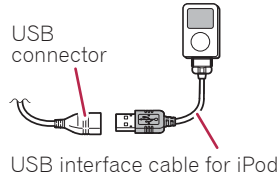

Note:
In this manual, iPod and iPhone will be referred to as iPod.

- 2 Switch the audio source to **iPod**.

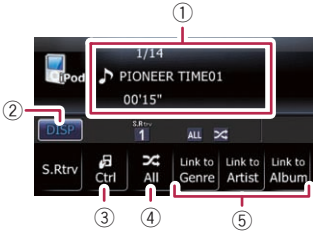

- 1 Shows the song title, the artist name, etc.
- 2 Changes the information of current song/file being played
- 3 Sets iPod control mode. You can switch control of the iPod between the touch screen and the iPod
- 4 Shuffles all songs
- 5 Plays songs related to the currently playing song

- 3 Operate iPod with **MULTI-CONTROL**.


- **Rotating MULTI-CONTROL**
Adjusts the audio source volume.
- **Pressing MULTI-CONTROL right or left**
Skips the song forward or backward.
- **Pressing the centre of MULTI-CONTROL**
Selects the desired item.
- **Pressing and holding MULTI-CONTROL right or left**
Performs fast forward or reverse.

Pairing your phone

- 1 Activate the Bluetooth function on your phone.
- 2 Touch the keys in the following order on the “Top Menu” screen; **Phone** → **Settings**.
- 3 Touch **Bluetooth On/Off** to select **On**.




- 4 Touch the keys in the following order; **Connections** → **Add** → **Search devices**. The system tries to find and lists nearby devices.

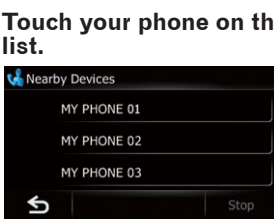


- 6 Enter the PIN code from your phone. (The PIN code is “1111”.)
When the pairing is successful, a message will appear.

Transferring the phone book


- 1 Connect the mobile phone.
- 2 Touch **Transfer** on the “Phone Menu”.

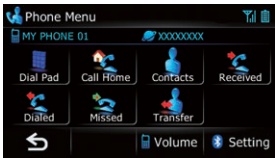

- 3 Touch **OK**.

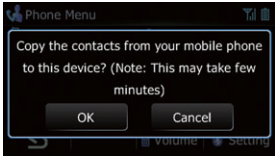

- 4 Check that the following screen is displayed, and operate your mobile phone to transfer the phone book entries.

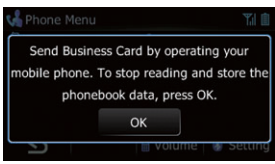

- 5 After transferring, touch **OK**.
When the transfer is successful, “**Completed data loading!**” will appear.